


COLLEGAMENTO LINK K1.5000

in the connection in the K1.5000 link is very important to perform the PRE adjustments so the same for both amplifiers both as regards the PB filter and the PA filter, it should be adjusted in the same manner also the input sensitivity and must insert both RCA as in the picture, also need to select the amplifier connected to the positive (+) phase of the subwoofer to 0 ° from the respective selector, and the amplifier connected to the subwoofer Negative phase at 180 ° from the respective selector.

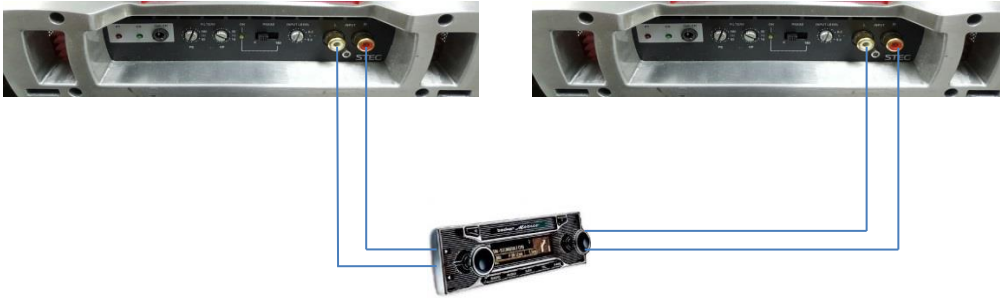

It is advisable to use cables by at least 4mm is with regard to the bridge between the two amplifiers, both as regards the connection to the subwoofer.

